6. Exploded View & Parts List

6-1 CS14V10MJ0XXSE

You can search for the updated part code through ITSELF web site.
URL : http://itself.sec.samsung.co.kr

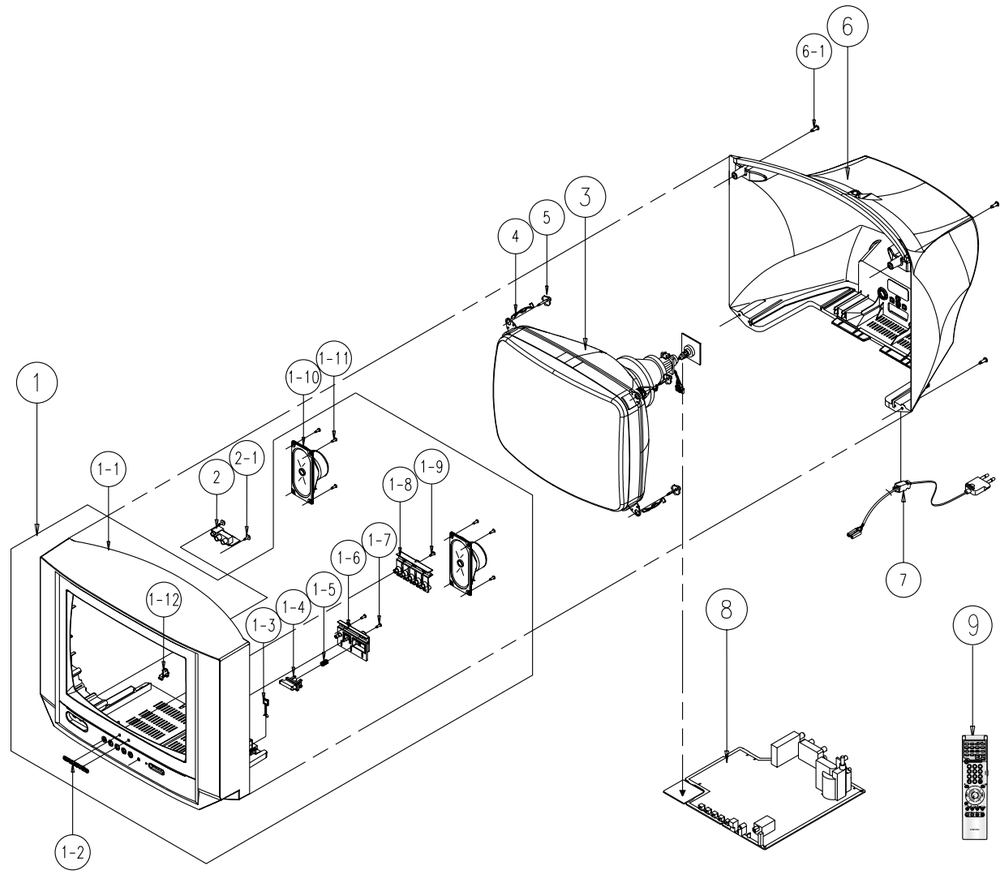

No	Code No	Description	Specification	Q'ty	Remark	S.N.A
1	AA96-01484B	ASSY COVER P-FRONT;14V10,(SPK),HIPS,G430		1	M0003	
1-1	AA64-03454D	CABINET FRONT;14V10,HIPS,HB,G4309,NO-COA		1	CIS3	
1-2	AA64-70127F	BADGE-BRAND;NEW,AL,-,-,L40,R800,SILVER,S		1	T0057	
1-3	AA65-30018A	CLAMP-WIRE;DONG-A,NYLON-66,-,-,-,DATL-60		1	T0614	
1-4	AA64-03464A	KNOB POWER;14,20,21V10,ABS,HB,G3676,SVM3		1	T0023	
1-5	AA61-60003J	SPRING-CS;-,SUS304,-,-,OD6,N7,OD6,-,-,-,		1		
1-6	AA64-03465A	WINDOW REMOCON-LED;V10,PC,CLEAR		1		
1-7	6002-000512	SCREW-TAPPING;RH,+,2,M4,L12,ZPC(BLK),SWR		2	T0081	S.N.A
1-8	AA64-03466A	KNOB CONTROL;14,20,21V10,ABS,HB,G3676,SV		1	T0022	
1-9	6002-000512	SCREW-TAPPING;RH,+,2,M4,L12,ZPC(BLK),SWR		1	T0081	S.N.A
1-10	AA96-00887A	ASSY SPEAKER;-,16OHM,5W,000280,350,700MM		1	T0522	
1-11	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR		8	T0081	
1-12	AA61-40113A	STOPPER-PCB;501H,HIPS,-,-,HB,NTR,-		1	T0607	
2	AA97-01278A	ASSY-PCB,A/V FRONT;,-38,-73,S15A,PAL,AA9		1		
2-1	6006-001095	SCREW-ASS'Y TAPT;WP,BH,+,M4,L12,ZPC(YEL)		2	AV+CF	
4	AA63-60028A	SPACER-DY;-,NEOPRENE,-,-,-,BLK,-,-,V0 W1		3		
5	AA60-10050R	SCREW-ASSY;-,SWRCH18A,M5,L31.5,HH,+,WC,-		4	SC016	
6	AA64-01035C	CABINET BACK;14D8,HIPS,HB,G4309		1	T0015	
6-1	AA60-10050T	SCREW-TAPPING;-,SWRCH18A,M4,L20,RH,+,2S,		4	T0081	
7	AA96-00734A	ASSY POWER CORD;,KKP419C,E,CP2/NO(4.0),H		1	T0066	
8	AA97-01845Z	ASSY PCB MAIN(COM);CS14H2X/XSE,KS1A,INDO		1	T0073	
9	AA59-00312D	REMOCON;DEEP IMPACT,TM75,31,NON-TTX,EX,P		1	T0074	

6-2 CS15K9MJ0S/NWT

You can search for the updated part code through ITSELF web site.
URL : http://itself.sec.samsung.co.kr

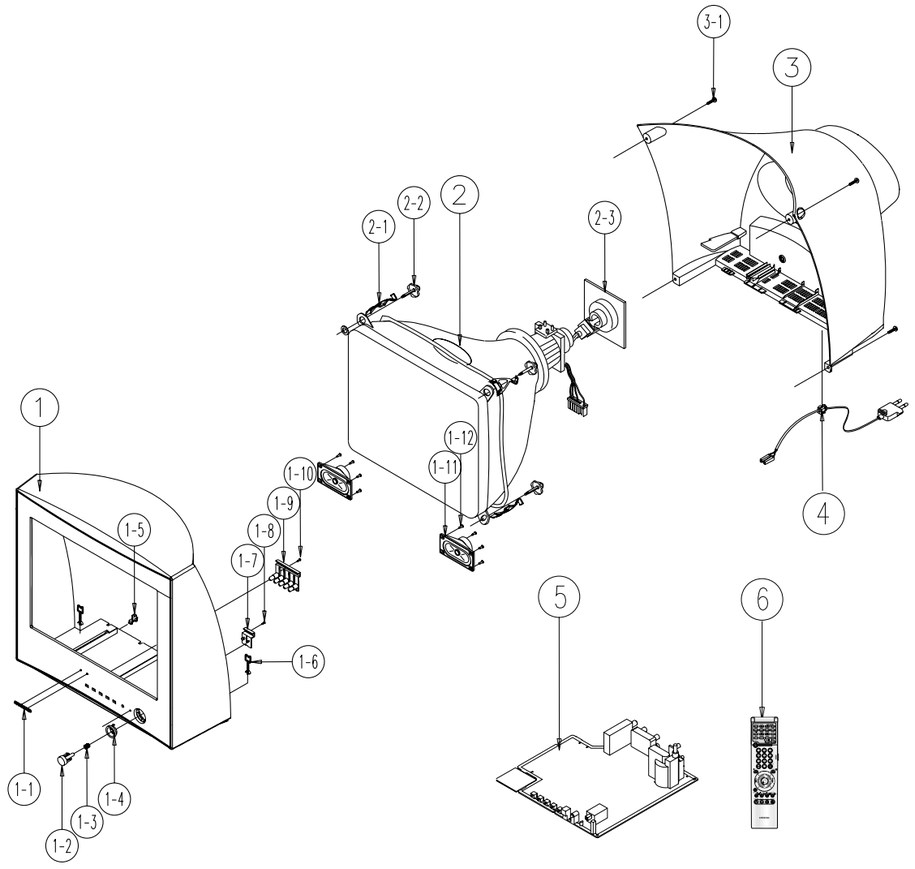

No	Code No	Description	Specification	Q'ty	Remark	S.N.A
1	AA96-01806A	ASSY COVER P-FRONT;DP,15K9,HIPS HB,G4309		1	M0003	
1*	AA64-03040A	CABINET FRONT;15K9,HIPS,HB,G4309,SV012P		1	CIS3	
1-1	AA64-70127A	BADGE-BRAND;ALL,AL,T1.4,6.3,L40,SAMSUNG,		1	T0057	
1-2	AA64-02921D	KNOB POWER;15K2,15K9,ABS,HB,WHT,SVM-3012		1	T0023	
1-3	AA61-60003J	SPRING ETC-CS;-,SUS304,-,-,OD6,N7,OD6,-,		1	CIS7	
1-4	AA64-01697C	DECORATION-POWER;15K2,ABS,HB,WHT,SVM6145		1	CIS3	
1-5	AA61-40113A	STOPPER-PCB;501H,HIPS,-,-,HB,NTR,-		1	T0607	
1-6	AA65-30105A	CLAMPER CORE-WIRE;ALL MODEL,NYLON 66,V2,		2		
1-7	AA64-01694B	WINDOW REMOCON;15K2,ACRYL,CLR		1	T0238	
1-8	6003-001026	SCREW-TAPTITE;RH,+,B,M4,L15,ZPC(BLK),SWR		1	T0081	
1-9	AA64-03042A	KNOB CONTROL;15K9,ABS,HB,G3676,SVM-3012		1	T0022	
1-10	6003-001026	SCREW-TAPTITE;RH,+,B,M4,L15,ZPC(BLK),SWR		1	T0081	S.N.A
1-11	AA96-00652A	ASSY SPEAKER;-,16OHM,3W,3001-001211,200M		1	T0522	
1-12	6003-001022	SCREW-TAPTITE;RH,+,B,M3,L12,ZPC(BLK),SWR		4	T0081	
2	AA03-00146A	CRT COLOR;A36QDT351X,380MG,2.5MH,22.5MH,		1	T0063	
2-1	AA65-30107A	CLAMPER CORE-D,COIL;20~22 INCH,NYLON 66,		2	T0527	
2-2	AA60-10050R	SCREW-ASSY;-,SWRCH18A,M5,L31.5,HH,+,WC,-		4	SC016	
2-3	3704-001105	SOCKET-CRT;11P,20PI,26.5PI,NI,-		1	V999S	
3	AA64-01692D	CABINET BACK;15K2,15K9,HIPS,V2,G4309		1	T0015	
3-1	AA60-10050T	SCREW-TAPPING;-,SWRCH18A,M4,L20,RH,+,2S,		4	T0081	
4	AA96-20109B	ASSY POWER CORD;-,CP2/NO(4.0),H/C250,KKP		1	T0066	
5	AA94-13548A	ASSY PCB MAIN;CS15K20S/NWT		1	T0073	
6	AA59-00198F	REMOCON;,TM59,DREAM,24,L/GRAY,MONO,PAL-T		1	T0074	

6-3 CB15N112TX/XEC

You can search for the updated part code through ITSELF web site.
URL : http://itself.sec.samsung.co.kr

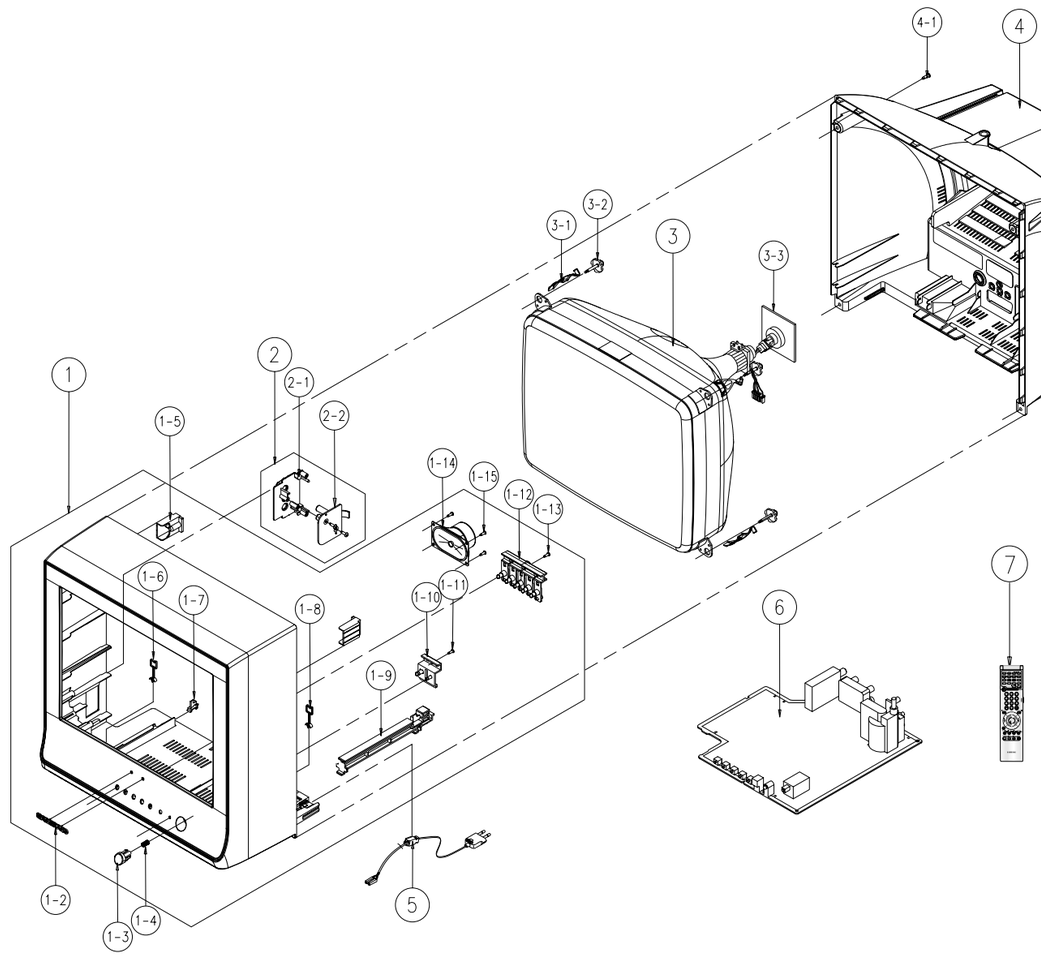

No	Code No	Description	Specification	Q'ty	Remark	S.N.A
1	AA96-01937A	ASSY COVER P-FRONT;15N11,HIPS HB,KS1A,SV		1	M0003	
1-1	AA64-03756A	CABINET FRONT;15N11(SEH),HIPS,HB,G4309,S		1	CIS3	
1-2	AA64-70127F	BADGE-BRAND;NEW,AL,T1.4,6.3,L40,R800,SIL		1	T0057	
1-3	AA64-03654A	KNOB POWER;17N11,ABS,HB,G4309,SVM3012		1	T0023	
1-4	AA61-60003J	SPRING ETC-CS;-,SUS304,-,-,OD6,N7,OD6,-,		1	CIS7	
1-5	AA61-40010A	BOSS-WING;-,HIPS,-,-,-,NTR,HB		2		
1-6	AA65-00011C	CLAMPER CORE-WIRE;ALL MODEL,NYLON 66,V2,		1		
1-7		STOPPER-PCB				
1-8	AA65-30105A	CLAMPER CORE-WIRE;ALL MODEL,NYLON 66,V2,		2		
1-9	AA61-00721B	HOLDER-RAIL;21F5,HIPS V2,GRY		1	T0156	
1-10	AA64-03652A	WINDOW-RMC LED;17N11,PC,CLEAR		1		
1-11	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR		1	T0081	
1-12	AA64-03653A	KNOB CONTROL;17N11,ABS,HB,G4309,SVM3012		1	T0022	
1-13	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR		1	T0081	
1-14	3001-001186	SPEAKER;3W,8OHM,80°æ2DB,270HZ		1	T0082	
1-15	6003-001023	SCREW-TAPTITE;RWH,+,B,M3,L10,ZPC(YEL),SW		4	T0081	
3	AA03-10007F	CRT COLOR;A36EKM71X01,+380MG,2.02MH,20.8		1	T0063	
3-1	AA65-30107A	CLAMPER CORE-D,COIL;20~22 INCH,NYLON 66,		2	T0527	
3-2	AA60-10050R	SCREW-ASSY;-,SWRCH18A,M5,L31.5,HH,+,WC,-		4	SC016	
3-3	3704-001105	SOCKET-CRT;11P,20PI,26.5PI,NI,-		1	V999S	
4	AA64-03757A	CABINET BACK;15N11(SEH),HIPS,FV2,GR503		1	T0015	
4-1	6003-001026	SCREW-TAPTITE;RH,+,B,M4,L15,ZPC(BLK),SWR		4	T0081	
5		POWER-CORD				
6	AA94-13894A	ASSY PCB MAIN;CB15N11T,KS1A,ELDOR,EKRANA		1	T0073	
7	AA59-00312B	REMOCON;DEEP IMPACT,TM75,36,TTX,EX,PAL,M		1	T0074	

6-4 CS20H4S/AST

You can search for the updated part code through ITSELF web site.
URL : http://itself.sec.samsung.co.kr

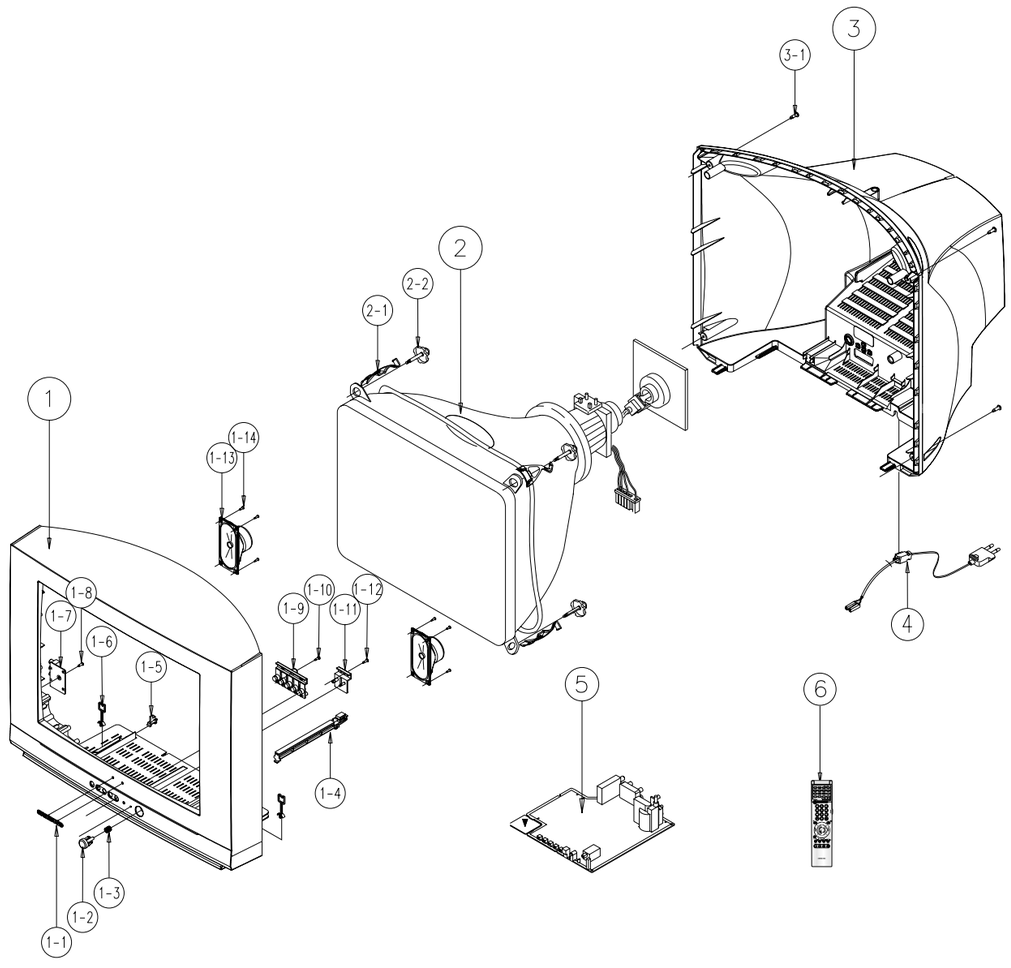

No	Code No	Description	Specification	Q'ty	Remark	S.N.A
1	AA96-00957A	ASSY COVER P-C/FRONT;20H4,HIPS HB,BLK,SP		1	T0003	
1*	AA64-02796A	CABINET-FRONT;20H4,HIPS,HB,BLK,BK708P ML		1	T0003	
1-1	AA64-70123B	BADGE-BRAND;ALL,AL,8.5,L50,BLK,SILVER,SA		1	T0057	S.N.A
1-2	AA64-02799A	KNOB-POWER;20H4,ABS,HB,BLK,NO-SILK		1	T0023	
1-3	AA61-60003J	SPRING ETC-CS;-,SUS304,-,-,OD6,N7,OD6,-,		1	CIS7	S.N.A
1-4	AA61-00721C	HOLDER-RAIL;H4,HIPS,V0,GRAY		1	T0156	S.N.A
1-5	AA61-40113A	STOPPER-PCB;501H,HIPS,-,-,HB,NTR,-		1	T0607	S.N.A
1-6	AA65-30105A	CLAMPER CORE-WIRE;ALL MODEL,NYLON 66,V2,		1		S.N.A
1-7	AA94-13418D	ASSY PCB MISC-A/V SIDE;21D8,KS1A,MONO		1	T0091	S.N.A
1-8	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR		1	T0081	
1-9	AA64-02801A	KNOB-CONTROL;20H4,ABS,HB,BLK		1	T0022	
1-10	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR		1	T0081	
1-11	AA64-02803A	WINDOW-RMC,LED;20H4,ACRYL,CLR		1	T0299	S.N.A
1-12	6003-001268	SCREW-TAPTITE;TH,+,B,M4,L12,ZPC(YEL),SWR		1	T0081	
1-13	3001-000274	SPEAKER;5W,8OHM,90DB,160HZ		2	T0082	
1-14	6003-001019	SCREW-TAPTITE;RH,+,B,M4,L12,ZPC(BLK),SWR		8	T0081	
2	AA03-10029W	CRT COLOR;A48KRD82X(H),380MG,2.20MH,30.0		1	T0063	
2-1	AA65-30107A	CLAMPER CORE-D,COIL;20~22 INCH,NYLON 66,		4	T0527	S.N.A
2-2	AA60-10050R	SCREW-ASSY;-,SWRCH18A,M5,L31.5,HH,+,WC,-		4	SC016	S.N.A
2-3	3704-001105	SOCKET-CRT;11P,20PI,26.5PI,NI,-		1	V999S	
3	AA64-01029C	CABINET BACK;20H2,HIPS,-,-,-,V2,BLK,-		1	T0015	
3-1	AA60-10050T	SCREW-TAPPING;-,SWRCH18A,M4,L20,RH,+,2S,		4	T0081	S.N.A
4	AA96-20109B	ASSY POWER CORD;-,CP2/NO(4.0),H/C250,KKP		1	T0066	S.N.A
5	AA94-13533A	ASSY PCB MAIN;CTV		1	T0073	
6	AA59-00198D	REMOCON;,TM59,DREAM,24,L/GRAY,MONO,NONTT		1	T0074	